


SWAM floor surface

INSTALLATION INSTRUCTIONS | MAY 2021


installation with curved post

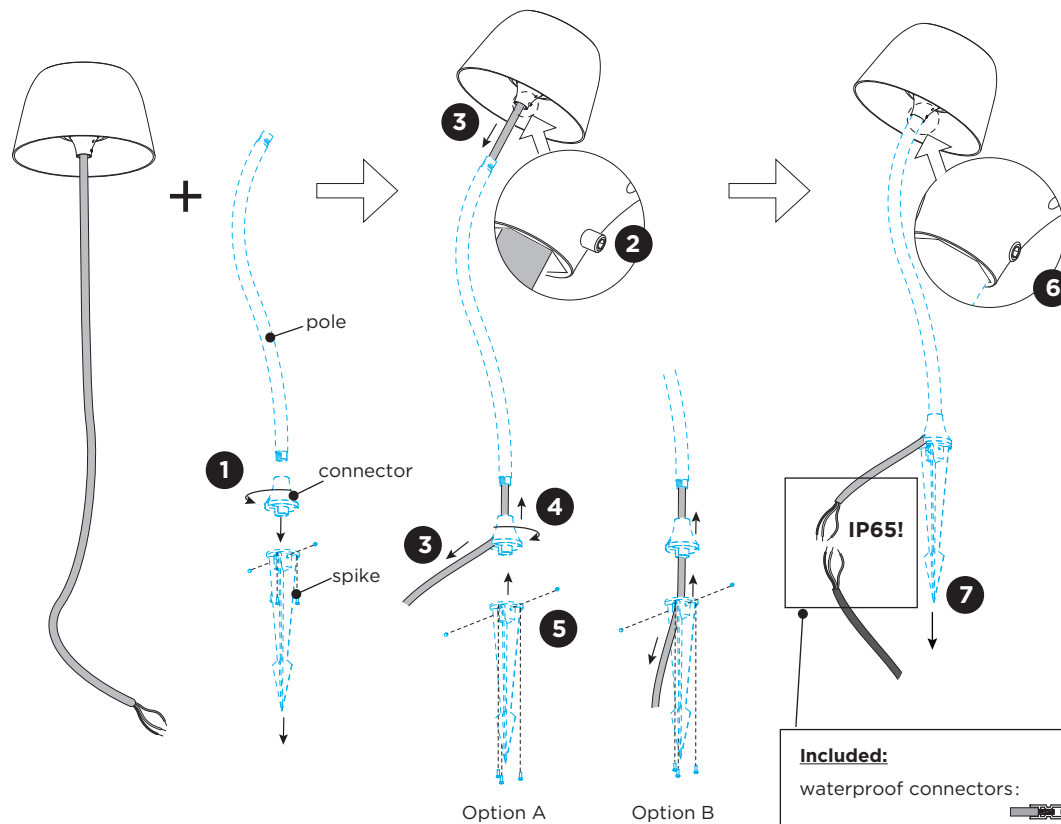

There are two optional paths for the cable go through.

Included:

waterproof connectors:




Optional:

IP68 connection box:

order ref. 73240707 = 2 WAYS 3x1,5 Ø8-10mm

DIMENSIONS




MOUNTING INSTRUCTION

- 1 Take the pole, connector and spike apart.
- 2 Unscrew the strain relief screw.
- 3 Guide the cable through the pole and the connector.
- 4 Screw back the connector to the pole.
- 5 Reassemble the spike to the connector.
- 6 Tighten the strain relief screw again in the Swam head.
- 7 Insert the spike into the ground.
- 8 **POWER CONNECTION**
Connect to 220-240V. Connect the wires with the waterproof connections.

SWAM floor surface

INSTALLATION INSTRUCTIONS | MAY 2021

installation with straight post

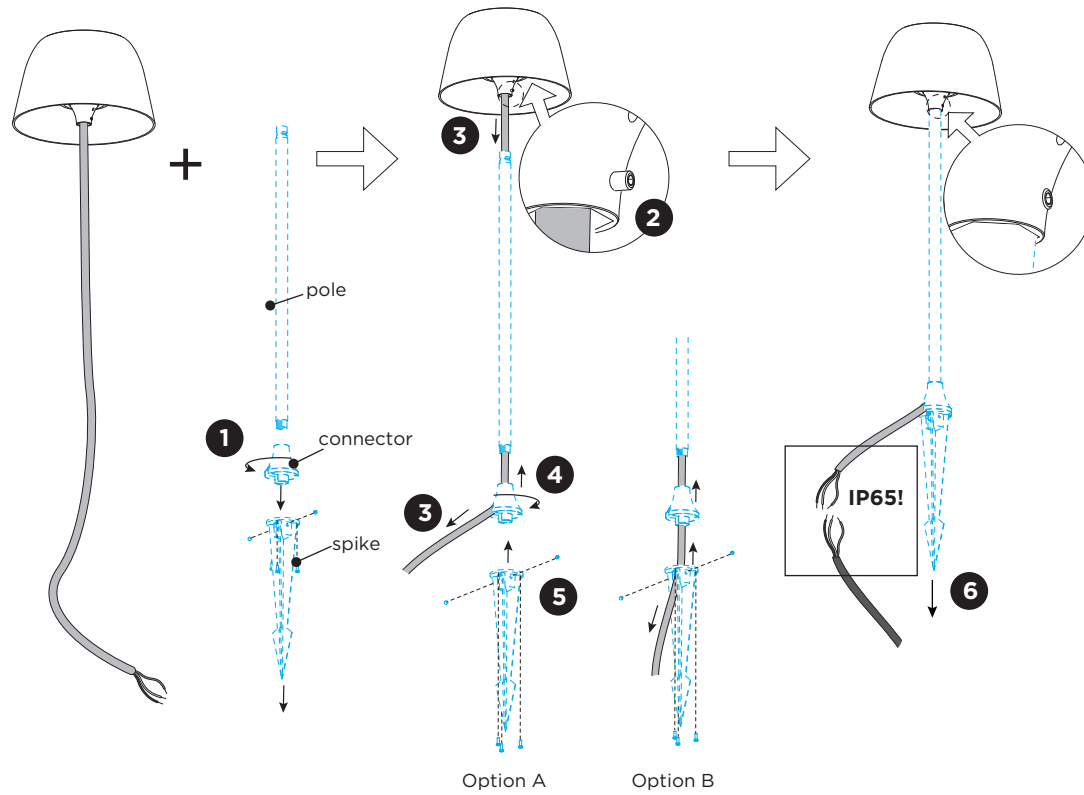

There are two optional paths for the cable go through.

installation with ground plate

