

STRANGE

25-07-2016

2.0 LED

LED 2x7/10W | 350-500mA | 18Vf | COB 3-step | excl. power supply

CE IP20 960°C 0,3m TE 35°/35° 355°

white texture
black texture

131261W_
131261B_

LIGHT COLOUR

2700K | >90CRI | 2x420-590lm | 18Vf

3

3000K | >90CRI | 2x470-640lm | 18Vf

5

1800-2850K | >90CRI | 2x320-440lm | 18Vf

9

ALWAYS USE

plaster kit
for power supplies see our catalogue

90017117

2.0 PAR16

 2xPAR16 max. 35W | GU10 | 220-240VAC | 50-60Hz

CE IP20 960°C 0,3m 35°/35° 355° DO NOT COVER

white texture
black texture


131220W0
131220B0

ALWAYS USE

plaster kit
for PAR16 lamps see our catalogue

90017117


plaster kit (has to be ordered separately)




2.0 LED

2.0 PAR16





①

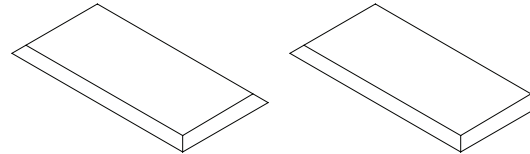


②

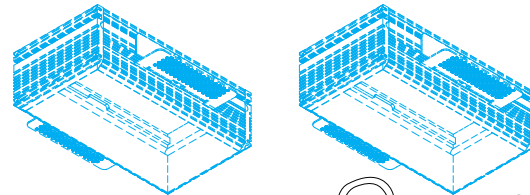

④

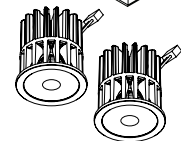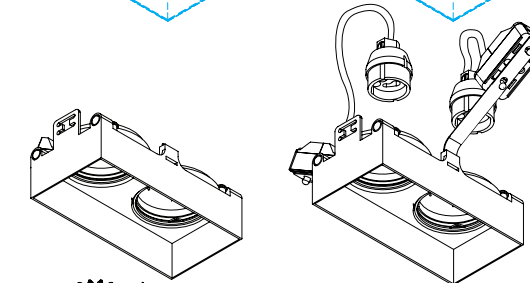

DIMENSIONS

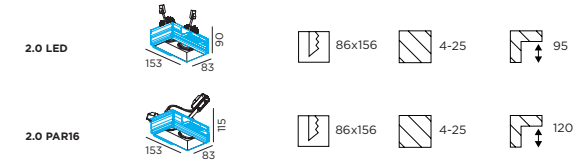


MOUNTING INSTRUCTION


- ① Make a hole in the ceiling according to the prescribed dimensions (always use a plaster kit)
- ② Insert the upper part of the fixture into the ceiling and plaster the borders seamlessly

POWER CONNECTION


- ③ SERIAL CONNECTION - for LED
Always use **POWER SUPPLY** according to the specifications of the LED-module



PARALLEL CONNECTION - for PAR16



- ④ Insert the fixture in the upper part. Place the LED-module or PAR16 lamp and fix with spring.
- ⑤ SAFETY DISTANCE FOR HALOGEN LAMPS

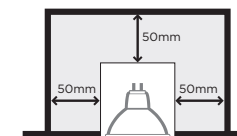

WEVER & DUCRÉ
LIGHTING

www.weverducre.com

INSTALLATION
INSTRUCTIONS